

**DICHIARAZIONE DI CONFORMITÀ / DECLARATION OF CONFORMITY / DÉCLARATION DE CONFORMITÉ  
KONFORMITÄTSEKTLÄRUNG / DECLARACION DE CONFORMIDAD / DECLARAÇÃO DE CONFORMIDADE**

Dichiara sotto la propria responsabilità che il prodotto:

- Declares under its own responsibility that the following product:
- Déclare sous sa propre responsabilité que le produit:
- Erklärt auf eigene Verantwortung, daß das Produkt
- Declara, bajo su propia responsabilidad, que el producto:
- Declara, sob a sua responsabilidade, que o produto:

Elettroserratura	EBP, EBP 24, EBPE 24, EBPE 52, EBPE 75
Looking	EBP, EBP 24, EBPE 24, EBPE 52, EBPE 75
E'lectroserrure	EBP, EBP 24, EBPE 24, EBPE 52, EBPE 75
Elektroschloß	EBP, EBP 24, EBPE 24, EBPE 52, EBPE 75
Electrocerradura	EBP, EBP 24, EBPE 24, EBPE 52, EBPE 75
Sechadura electrica	EBP, EBP 24, EBPE 24, EBPE 52, EBPE 75

- È conforme ai requisiti essenziali di sicurezza delle Direttive:
- It also complies with the main safety requirements of the following Directives:
- Est conforme aux exigences essentielles de sécurité des Directives:
- Es entspricht den grundlegenden Sicherheitsbedingungen der Direktiven:
- Es conforme a los requisitos esenciales de seguridad de las Directivas:
- Está conforme aos requisitos essenciais de segurança das Directivas:

BASSA TENSIONE  
LOW VOLTAGE  
BASSE TENSION  
NIEDERSpannung  
BAJA TENSION  
BAIXA TENSÃO

**73/23/CEE, 93/68/CEE (EN 60335-1 (1995))**

COMPATIBILITÀ ELETTROMAGNETICA  
ELECTROMAGNETIC COMPATIBILITY  
COMPATIBILITÉ ÉLECTROMAGNÉTIQUE  
ELEKTROMAGNETISCHE KOMPATIBILITÄT  
COMPATIBILIDAD ELECTROMAGNETICA  
COMPATIBILIDADE ELECTROMAGNÉTICA

**89/336/CEE, 91/263/CEE, 92/31/CEE, 93/68/CEE  
(EN 50081-1, EN50081-2)**

SCGIO 01.01.1997

Il Rappresentante Legale / The legal Representative  
Le Représentant Légal / Der gesetzliche Vertreter  
El Representante Legal / O Representante legal

*Benotto Aina*



- I** ELETTROSERRATURA
- GB** LOOKING
- F** ÉLECTROSERRETURE
- D** ELECKTROSCHLOß
- E** ELECTROCERRADURA
- P** SECHADURA ELECTRICA

**EBP - EBP E**



**ISTRUZIONI D'USO E DI INSTALLAZIONE  
INSTALLATION AND USER'S MANUAL  
INSTRUCTIONS D'UTILISATION ET D'INSTALLATION  
MONTAGE- und BEDIENUNGSANLEITUNG  
INSTRUCCIONES DE USO Y DE INSTALACION  
INSTRUÇÕES DE USO E DE INSTALAÇÃO**



**BFT S.P.A.**  
Via Lago di Vico 44, 36015 Schio (VI) - Italy  
tel. +39 0445 69 65 11 / fax +39 0445 69 65 22  
www.bft.it / e-mail: info@bft.it

**AUTOMATISMES BFT FRANCE**  
13 Bd. E. Michelet, 69008 Lyon - France  
tel. +33 (0)4 78 76 09 88 - fax +33 (0)4 78 76 92 23  
e-mail: contacts@automatismes-bft-france.fr



**BFT Torantriebssysteme GmbH**  
Faber-Castell-Straße 29  
D-90522 Obernassbach - Germany  
tel. +49 (0)911 766 00 90 - fax +49 (0)911 766 00 99  
e-mail: service@bft-torantriebe.de

**BFT Automation UK Ltd**  
Unit 8E, Newby Road  
Industrial Estate Hazel Grove, Stockport,  
Cheshire, SK7 3DA - UK  
tel. +44 (0) 161 4500456 - fax +44 (0) 161 4569090  
e-mail: info@bftautomation.co.uk

**BFT BENELUX SA**  
Parc Industriel 1, Rue du commerce 12  
1400 Nivelles - Belgium  
tel. +32 (0)67 55 02 00 - fax +32 (0)67 55 02 01  
e-mail: info@bftbenelux.be

**BFT-ADRIA d.o.o.**  
Obrvoac 39  
51216 Dražice (Rijeka)  
Hrvatska - Croatia  
tel. +385 (0)51 502 640 - fax +385 (0)51 502 644  
e-mail: info@bft.hr

**BFT Polska Sp. z o.o.**  
ul. Kolacińska 35  
03-171 Warszawa - Poland  
tel. +48 22 814 12 22 - fax +48 22 814 39 18  
e-mail: biuro@bft.com.pl

**BFT USA BFT U.S., Inc.**  
6100 Broken Sound Pkwy, N.W., Suite 14  
Boca Raton, FL 33487 - U.S.A.  
T: +1 561.995.8155 - F: +1 561.995.8160  
TOLL FREE 1.877.995.8155 - info.bft@bft-usa.com

**BFT GROUP ITALIBERICA DE AUTOMATISMOS S.L.**  
Pol. Palou Nord,  
Sector F - C/ Cami - Can Basa nº 6-8 08401 Granollers -  
(Barcelona) - Spain  
tel. +34 938 61 48 28 - fax +34 938 70 03 94  
e-mail: bftbcn@bftautomatismos.com

**Pl. Comendador - C/**  
informática, Nave 22 - 19200 Azuqueca de henares  
(Guadalajara) - Spain  
tel. +34 949 26 32 00 - fax +34 949 26 24 51  
e-mail: administracion@bftautomatismos.com

**BFT SA-COMERCIO DE AUTOMATISMOS E MATERIAL DE SEGURANCA**  
Urbaniza,ção da Pedralha Lote 9 - Apartado 8123,  
3020-305 COIMBRA - PORTUGAL  
tel. +351 239 082 790 - fax +351 239 082 799  
e-mail: geral@bftportugal.com

**AZIENDA CON SISTEMA DI GESTIONE  
INTEGRATO CERTIFICATO DA DNV  
= UNI EN ISO 9001:2008 =  
UNI EN ISO 14001:2004**

Via Lago di Vico, 44  
36015 Schio (VI)  
Tel. naz. 0445 696511  
Tel. int. +39 0445 696533  
Fax 0445 696522  
Internet: www.bft.it  
E-mail: sales@bft.it



Mod.	EBP - EBPE52 - EBPE75 - EBPE90			
Alimentazione Power supply Alimentation Stromversorgung Alimentación Alimentação	<b>EBP 230</b> 220-230V 50/60 Hz	<b>EBP 110</b> 120V~ 50/60 Hz	<b>EBP 24</b> 120/230V~ 24V~ ±10% 50/60Hz	<b>EBP 12</b> 12V~ ±10% 50/60Hz
Corrente di spunto Breakaway current Courant de démarrage Spitzenstrom Corriente de arranque Corrente de tomada de força	400mA	840mA	15A	24A
Corrente di mantenimento serratura attratta Current for keeping the lock picked up Courant de maintien de serrure bloquée Haltestrom angezogenes Elektroschloß Corriente de mantenimiento cerradura activada Corrente de manutenção da fechadura excitada	150mA	260mA	1,45A	3A
Temperatura di utilizzo Working temperature Température d'utilisation Betriebstemperatur Temperatura de funcionamento Temperatura de utilização	-20° ÷ +55°			
Grado di protezione Case protection Degré de protection Schutzgrad Grado de protección caja Grau de protecção	IP44			

